




**DERO**  
A PLAYCORE Company

Dero Duplex

**Setbacks** Single Sided

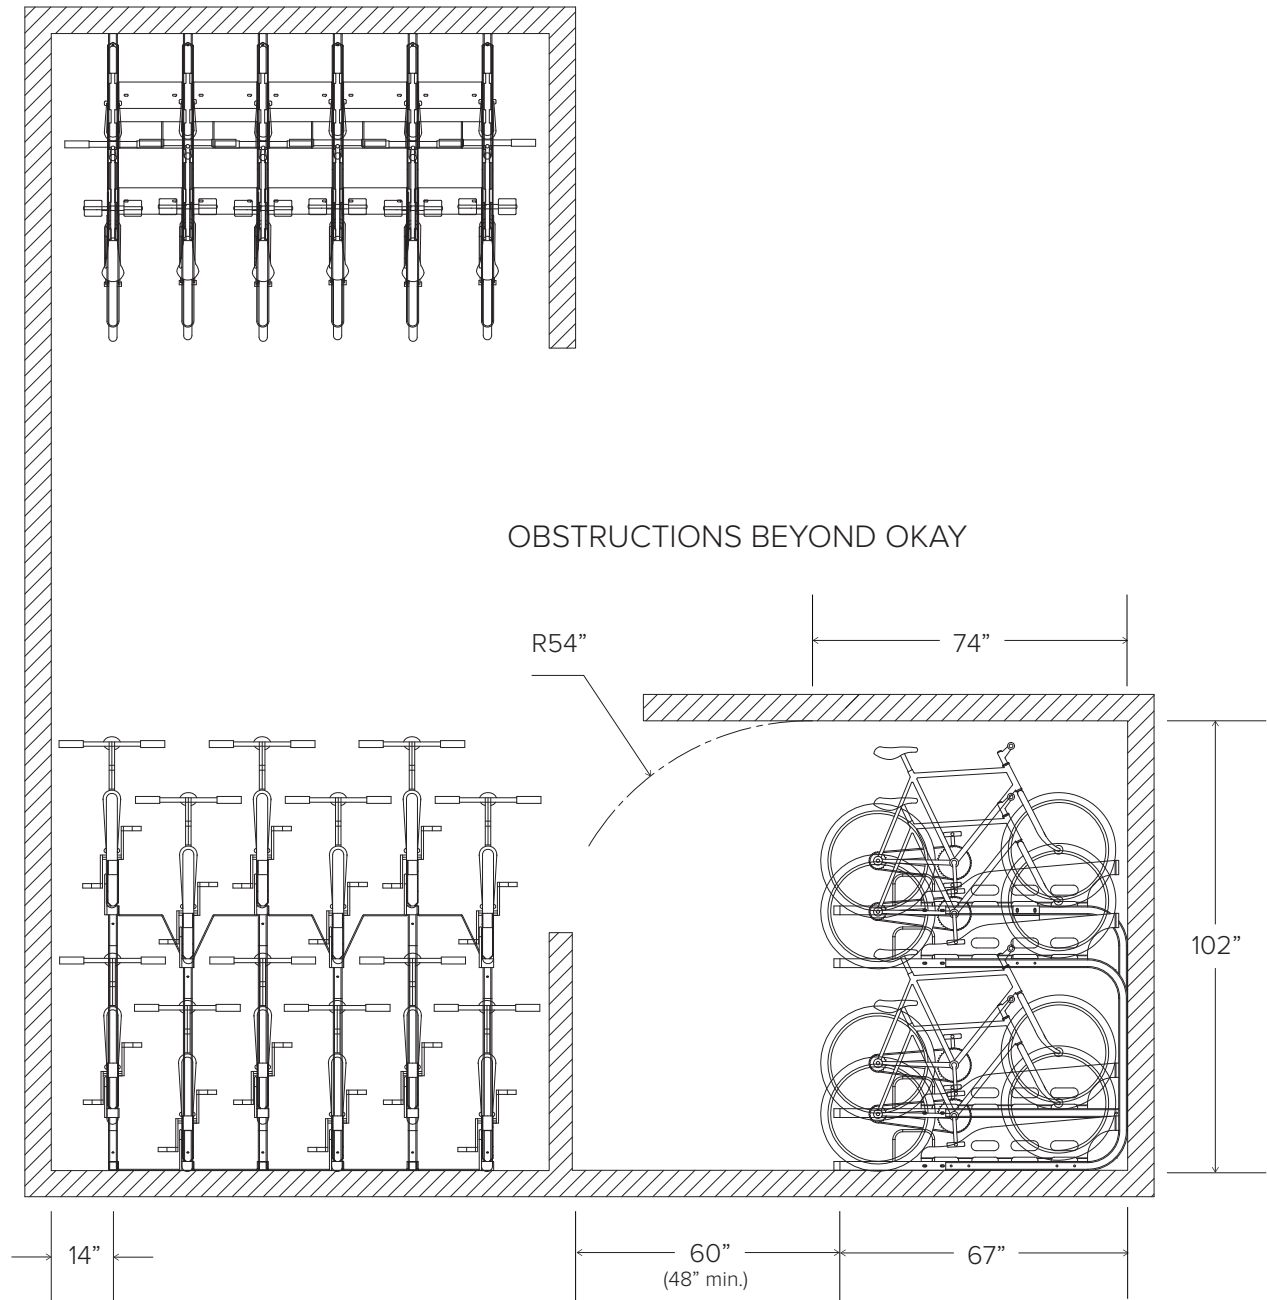




**DERO**  
A PLAYCORE Company

Dero **Duplex**

**Setbacks** Double Sided

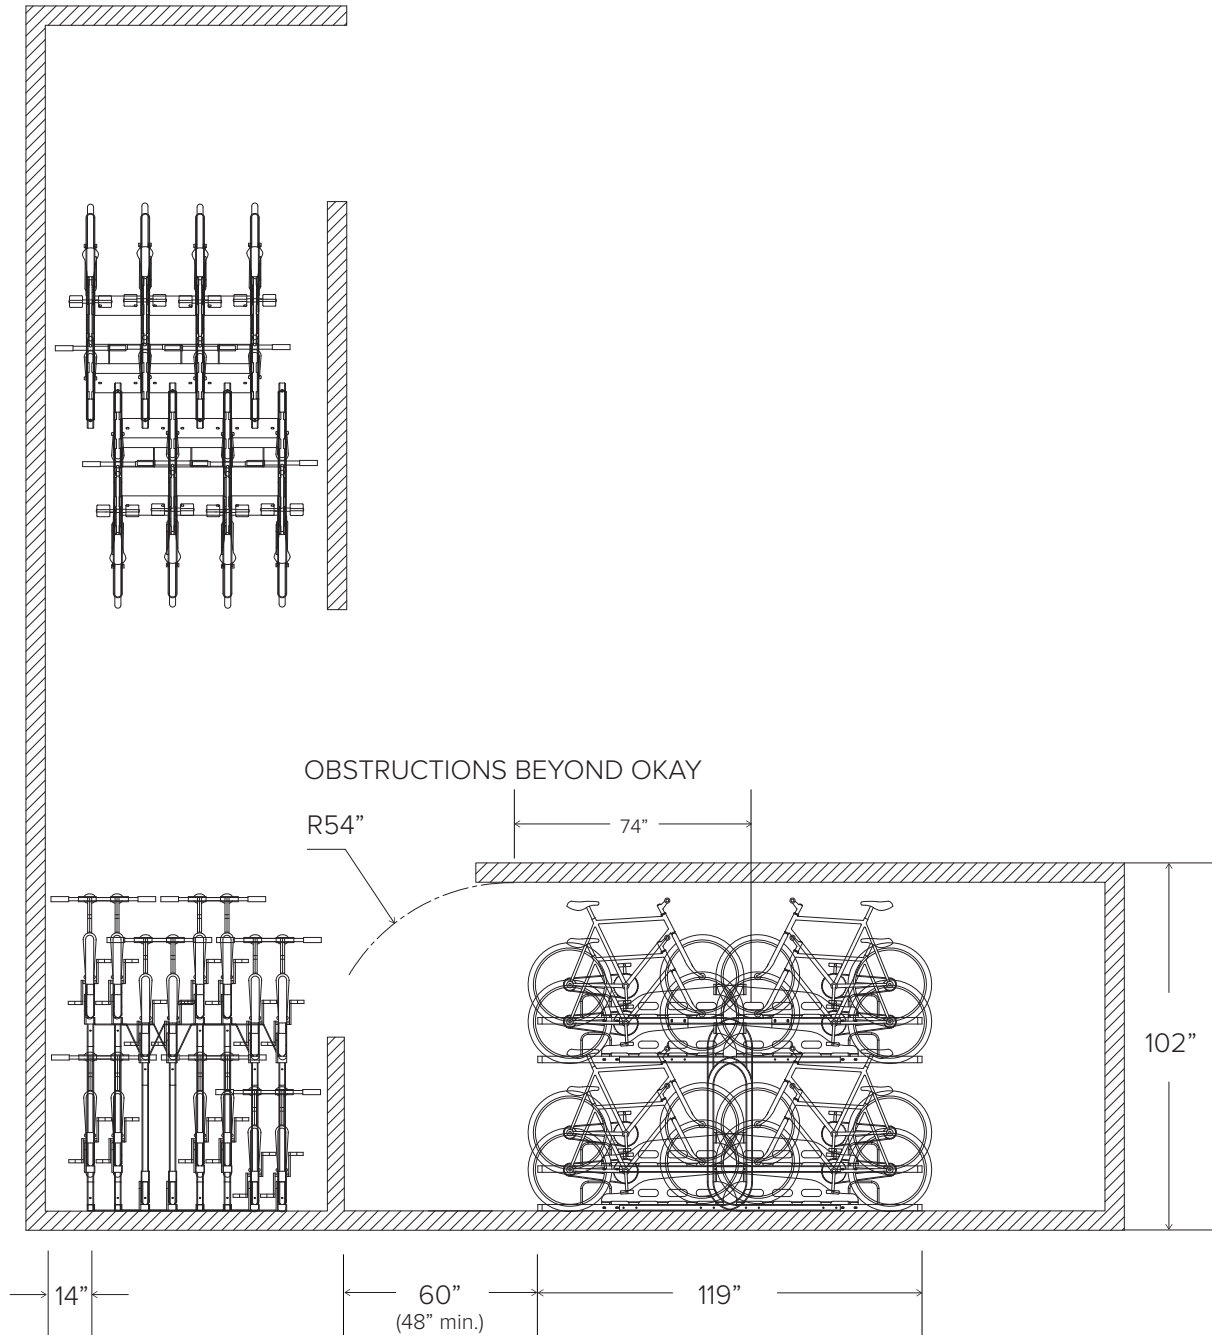







**DERO**  
A PLAYCORE Company

Dero **Duplex**


## Parts List

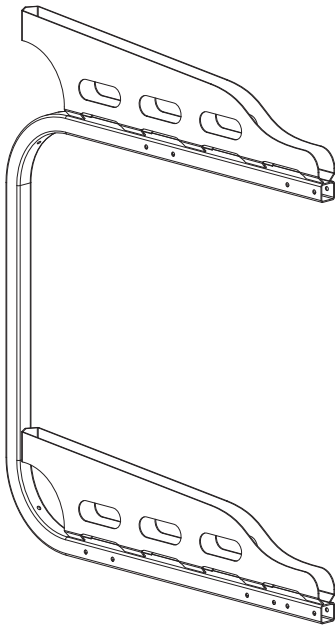

DUPLEX LOWER UNIT

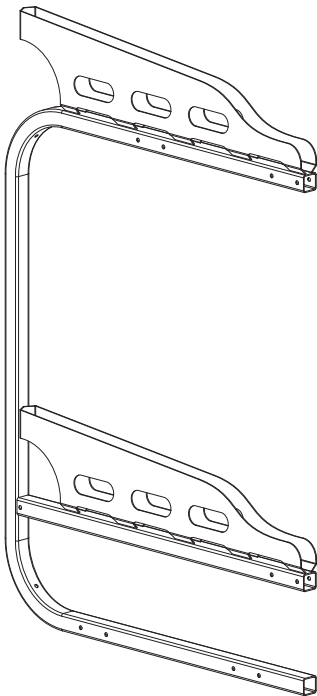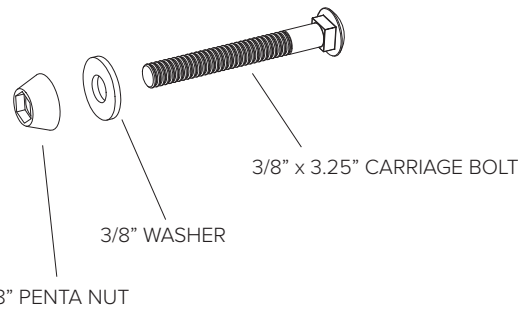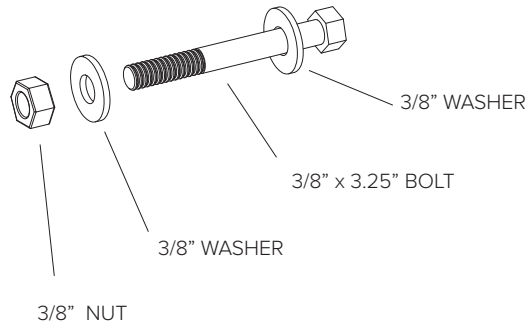


DUPLEX UPPER UNIT

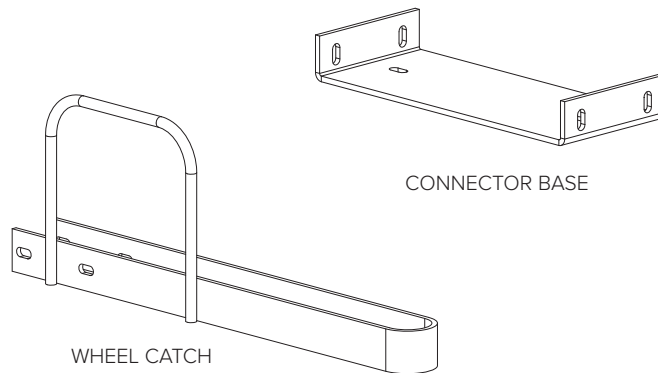


WHEEL CATCH

CONNECTOR BASE

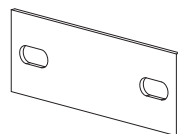


WHEEL CATCH SPACER

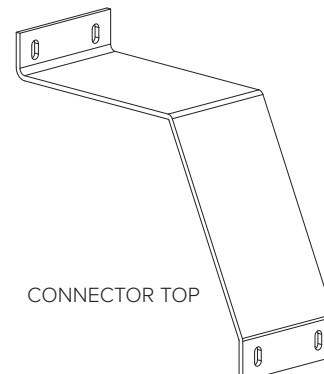

CONNECTOR TOP




1

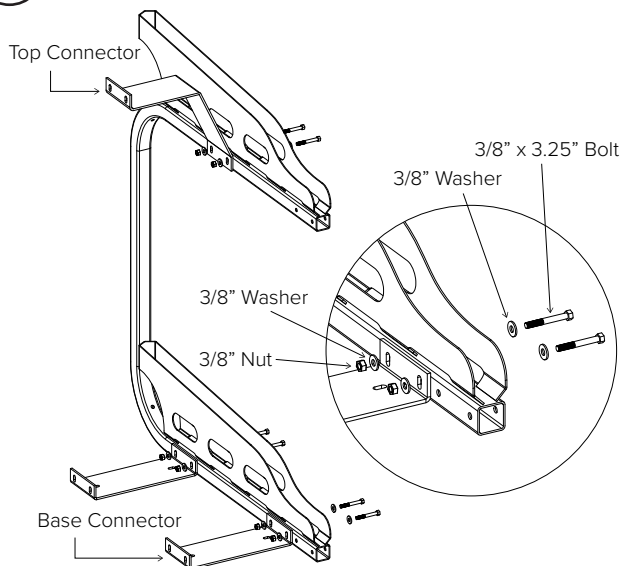


Place the first DUPLEX LOWER UNIT and attach CONNECTORS with hardware.

2

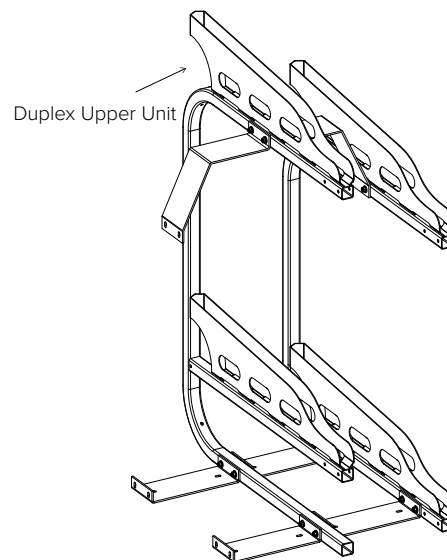

Drill the holes in accordance with the specifications shipped with the anchors. Make sure the holes are at least 3" away from any cracks in the base material.

3

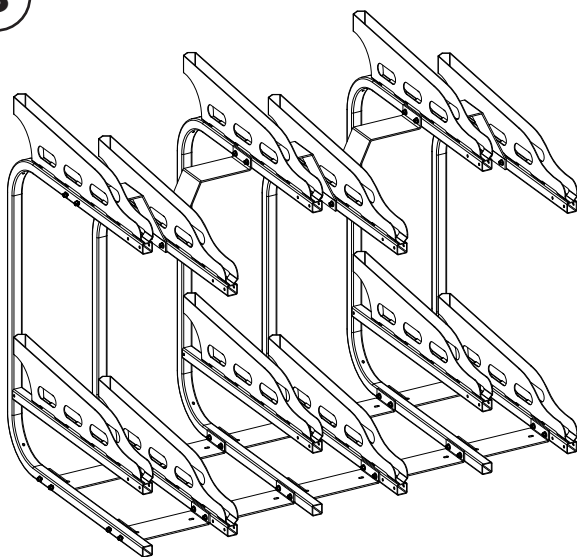


Continue repeating steps 1 and 2 as necessary.

4




Be sure to use (2) tamper-proof penta nuts to secure wheel catch.

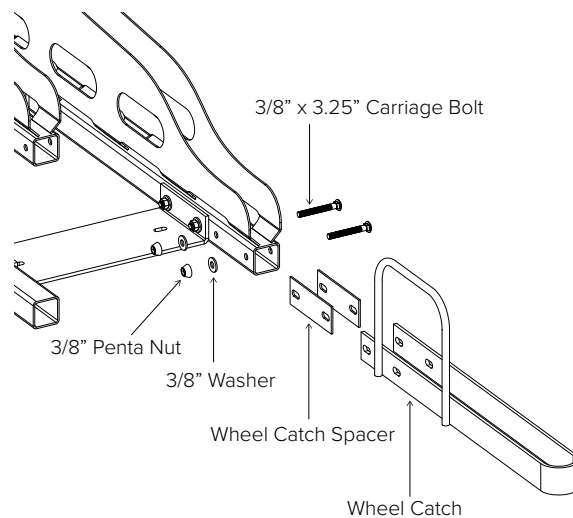

Place WHEEL CATCH and SPACERS and attach with hardware. Repeat for all trays.




5

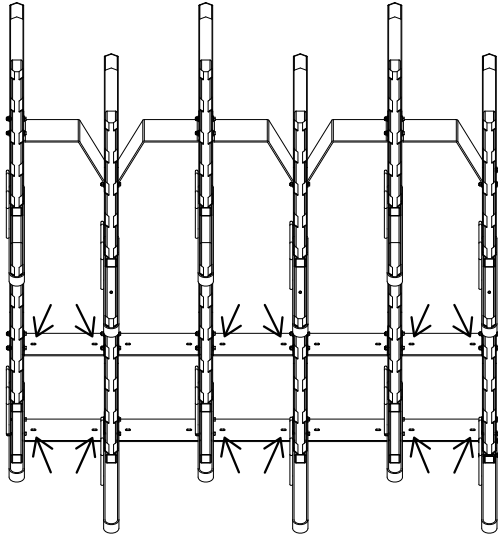

Secure the DUPLEX ASSEMBLY with 3/8" WEDGE ANCHORS. Secure at the first and last pair of bases and then every other pair of bases.

6

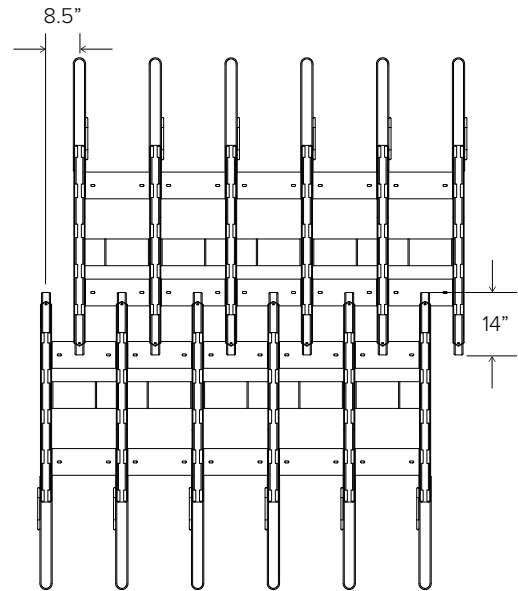

For double sided assemblies, simply place two single sided assemblies back to back with a 14" overlap.